

Weight conversion module

CSD-892B-74

Spec.No.EN382892B-74A

1/8

1. General

This instrument is the digital conversion module for strain gage applied transducers which adopt the DIN mounting type and in suitable with built-in control panel.

This instrument is equipped with RS-232C interface as standard equipment.

2. Specifications

2-1. Specifications for analog

• Bridge power supply DC5 V±0.25 V within 60 mA, with sensing

Up to 4 pieces of strain gage applied transducers (350 ohm) can be • Applicable transducers

connectable.

 $0.15 \,\mu\text{V/d}$ or more (d = minimum scale) Input sensitivity

* 0.2 µV/d (In case of applying CE conformity standard.)

 $-3.1 \text{ mV/V} \sim 3.1 \text{ mV/V}$ Input range

• Zero adjustment range ± 2.5 mV/V 0.01 %F.S. • Non-Linearity

• Temperature coefficient

±0.2 µV/°C Zero point

(When the calibration is made at 0.15 µV/d or more of the input sensitivity.)

±0.001 5 %F.S./°C Sensitivity

(When the calibration is made at 0.15 µV/d or more of the input sensitivity.)

 Input noise $\pm 0.2 \,\mu Vp$ -p or less

> (At the default setting of analog filter, digital filter and stabilization filter.) Approx. $4.0 \,\mathrm{Hz} \,(2.0 \,\mathrm{Hz} \sim 10.0 \,\mathrm{Hz}$, it can be swiched at intervals of $0.1 \,\mathrm{Hz}$.)

• Anlog filter

• A/D sampling 500 times/s (Changeable to 250 times/s, 100 times/s, 50 times/s.)

• A/D internal resolution 24 bits

2-2. Specification for digital

Main display (Load display)

Display range $-99999 \sim 99999$

Display increment 1 (Changeable to 2, 5, 10, 20, 50)

FSTN liquid crystal (With umber color LED back light.) Display unit Over display "-OL" display at minus over, "OL" display at plus over "-OVF" display at minus over, "OVF" display at plus over AD value over display

ZERO, SPAN, mV/V, STABLE, TARE, GROSS, NET, CZ, LOCK, HOLD, Condision display

ERROR

• Display rate 4 times/s

• Judgement display OUT 1, 2, 3, 4, 5

• Decimal point display No display, 10¹, 10², 10³ and 10⁴ changeable.

• Unit display No display, g, kg, t, N, kN, lb, Pa, kPa or MPa changeable.



CSD-892B-74

Spec.No.EN382892B-74A

2/8

2-3. Specifications for setting

• Internal setting value

EEPROM Calibration data, the data that relates to calibration and

comparator set value

SRAM Zero set data, Zero tracking data, and Tare data.

(The backup function is not provided in SRAM. You can change the stored place of Zero set data, Zero tracking data and Tare data to EEPROM by the

function setting.)

2-4. Function of front panel key switch

FUNC Shifts to Function mode.

/Shifts to calibration mode of a simple calibration.

(By pushing 2 seconds or more)

CAL-Z/◀ Shifts to ZERO calibration mode of a simple calibration.

(By pushing 2 seconds or more)

/Shifts to calibration lock mode of a simple calibration.

(By pushing 2 seconds or more CAL-Z/◀ and CAL-S/▲ at the same time.)

/ Carry up the setting value.

CAL-S/▲ Shifts to SPAN calibration mode of a simple calibration.

(By pushing 2 seconds or more)

/ Set value increment.

F/ENTER Register the setting value. Execute function set in F/ENTER key.

Selectable from None, Hold, Zero set, Zero clear, Tare weight cancellation,

Tare weight clear, changeover of gross value/net value.

Shift to the setting mode of comparator.




CSD-892B-74

Spec.No.EN382892B-74A

3/8

2-5.External control function

- External control input signals
 - 3 functions in the following can be arbitrarily selected.
 - OFF
 - Zero set
 - Zero clear
 - Tare
 - · Tare clear
 - Changeover the display for net value or gross value.
 - Hold(Pulse)
 - Error release
 - * Above are pulse input, and effective only once at the pulse width of 50 ms or more.
 - Hold(Level)
 - Display of NET (With ON, the net weight is displayed when the Gross weight is shown.)
 - Batch key lock
 - * Above are level input, and effective during the input of short for 50 ms or more.
- Equivalent circuit of the external control input section

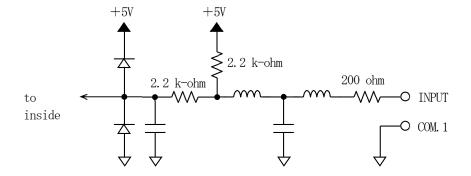



CSD-892B-74


Spec.No.EN382892B-74A

4/8

• External control output signals

5 functions in the following can be arbitrarily selected.

- OFF
- Stable
- During canceling the Tare weight
- Display of gross
- · Display of net
- Center zero
- During the hold
- · Error, Abnormal weight
- Z-Band
- OK (S0),
- Big flow (S1)
- Middle flow (S2)
- Small flow (S3)
- Over (S4)
- Under
- Full
- RUN
- Equivalent circuit of external control output

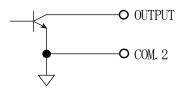

Rated open collector V_{CE} = DC35 Vmax, I_{C} = DC50 mAmax

* COM.1 and COM.2 are connected in the instrument.

2-6. Comparator function

• Set value

• Numbers of setting

 \bullet Set value of hysteresis data width

• Direction of hysteresis

• Conversion times of comparator

 $-99999 \sim 99999$

5 points of S0, S1, S2, S3 and S4

 $0 \sim 99$ digits

Whichever changeable to "On delay" or "Off delay"

Changeable to synchronous with the A/D sampling times or display late.



CSD-892B-74

Spec.No.EN382892B-74A

5/8

2-7.RS-232C interface

Specifications

Baud rate : Selectable from 1 200, 2 400, 4 800, 9 600, 19 200 or 38 400 bps.

Data bit length
Parity bit
Selectable from 7 bit or 8 bit.
Selectable from none, even or odd.
Stop bit
Selectable from 1 bit or 2 bit.
Terminator
Selectable from CR+LF or CR.

Communication method : Half duplex

Synchronizing method : Start - Stop synchronized method

Communication data : ASC II code(Command mode and Stream mode)

: Binary code(Modbus mode)

Cable length : Within 15 m

Data transmission mode: Selectable from Command, Stream or Modbus.

• Pin configuration of RS-232C connector

Applicable plug : DE-9S-NR by JAE or equivalent.

11 1 0	
Pin No.	Signal name
1	$^{\mathrm{CD}}$
2	TXD
3	RXD
4	N.C.
5	S.G.
6	N.C.
7	RTS
8	CTS
9	N.C.

^{*} Plug for connector is not attached.

• Function

- (1) Reading out the load.
- (2) Reading out the condition.
- (3) Changing the condition.
- (4) Reading out the set value of conparator.
- (5) Changing the set value of conparator.
- (6) Reading out the set value of various functions.
- (7) Changing the set value of various functions.
- (8) Load calibration
- (9) Communication error code

^{*} The engagement fixation screw is inch type.

^{*} Don't connect with N.C. pin.



CSD-892B-74

Spec.No.EN382892B-74A

6/8

2-8.USB interface

• Standard Comfirms to USB2.0 (Can also use with the standard of USB1.1)

• Connector mini USB B type (female)

* Please use the USB interface after installing a specical driver in the host side.

* The USB interface, cannot be used if you are using the RS-232C interface.

2-9. Various functions

• Zero tracking Stabilize the fluctuation of the zero point in a constant condition.

Digital filter
 Stabilized filter
 Data is stabilized through the calculation process with the software in CPU.
 Stabilized filter
 The digital filter is reinforced and stabilized only when the width of the

change of the load is constant.

• Digital linearize Executes the compensation of the non-linearity by the max. 3 points or less.

3. General specifications

• Operating temperature/humidity range

Temperature $-10 \,^{\circ}\text{C} \sim 50 \,^{\circ}\text{C}$

Humidity 85 %RH or less (Non condensing.)

• Stored temperatre range $-20 \,^{\circ}\text{C} \sim 60 \,^{\circ}\text{C}$

• Power supply

Power supply voltage DC24 V (Permisible variable range DC20.4 V ~ DC27.6 V)

Power consumption Approx. 2.4W (at DC24 V)

• Outline dimensions 72 mm(W)× 96 mm(H)× 67.4 mm(D)

(excludes protruding parts)

• Weight Approx.260 g

4. Specifications at the time of shipment

• Bridge power supply DC5 V

• Span adjustment 10 000 display at the input of 0.5 mV/V

• The minimum scale 1

5. Accessories

Start guide (in Japanese)
Start guide (in English)
Short bar
1 piece
2 pieces

6. Options

6-1.EzCTS (Ez Communication Tool Software)

The PC that installs EzCTS and connects with CSD-892B-74, can read and write the parameter set with CSD-892B-74.

* For details, EzCTS please refer to specifications.





CSD-892B-74

Spec.No.EN382892B-74A

7/8

7. Outline dimensions

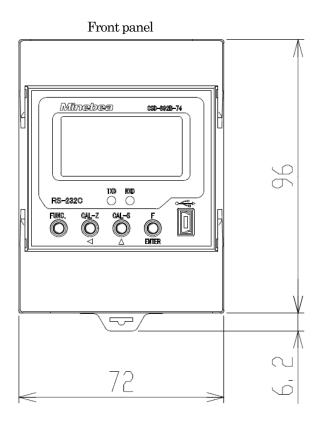

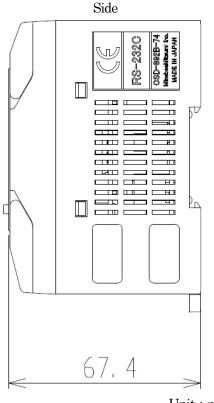

Unit: mm

^{*} It corresponds to the rail of 35 mm of DIN standard width.



CSD-892B-74

Spec.No.EN382892B-74A

8/8

8. Conformity standard

• This instrument has suited the following standard.

EN61326-1:2013

"Electrical equipment for measurement, control and laboratory use - EMC requiremenrs"

"Immunity test requirements for equipment intended for use in industrial locations"

JIS B 7611-2: 2015

"Non-automatic weighing instruments - Metrological and technical requirements and test - Part2: Measuring instruments used in transaction or certification."

According to Annex C (Environmental Level H), (Environmental Level L).

RoHS compliant

* CE conformity standard is not effective in case of using USB interface.

Please observe the following conditions strictly when this instrument suits the below, it may not conform to the above standard when these are neglected.

8-1.Wiring

- (1) About cable
 - Use the shielded cable other than the power cable.
- 2 Shield processing
- Please connect the shield cable of load cell with E terminal in upper terminal block.
- The shield must connect with the connector on the main body by using the shielded cable for the connection of the RS-232C interface via the engagement screw of the RS-232C connector.
- Select the shell of the RS-232C interface connector that measures of EMI is applied.
- Please make sure to do the shield prosessing on the cable for RS-232C interface and the external control I/O.
- ③ Grounding
- The ground shall apply the individual ground by using the F.G. terminal in lower terminal block.
- 4 Surge countereasure parts
- When applying to EN61326-1:2013, connect an external surge absorber (Model: RSP-DC24Q-4 Made by Okaya Electric Industries Co., Ltd.) or equivalent products (breakdown voltage of 33V or more) in parallel to the terminal block (F.G., 24V, 0V).
- When applying to JIS B 7611-2:2015 level H, connect an external surge absorber (Model: RSP-DC24Q-4 Made by Okaya Electric Industries Co., Ltd.) in parallel to the terminal block (F.G., 24V, 0V).
 When applying to JIS B 7611-2:2015 level L, no surge absorbers are required.
- * Specifications and Outline dimensions and so on which have printed may subject to change for the purpose of improvement without notice.